


??U?????

????BIOS????

1. ?????


- ?????????Del????BIOS????

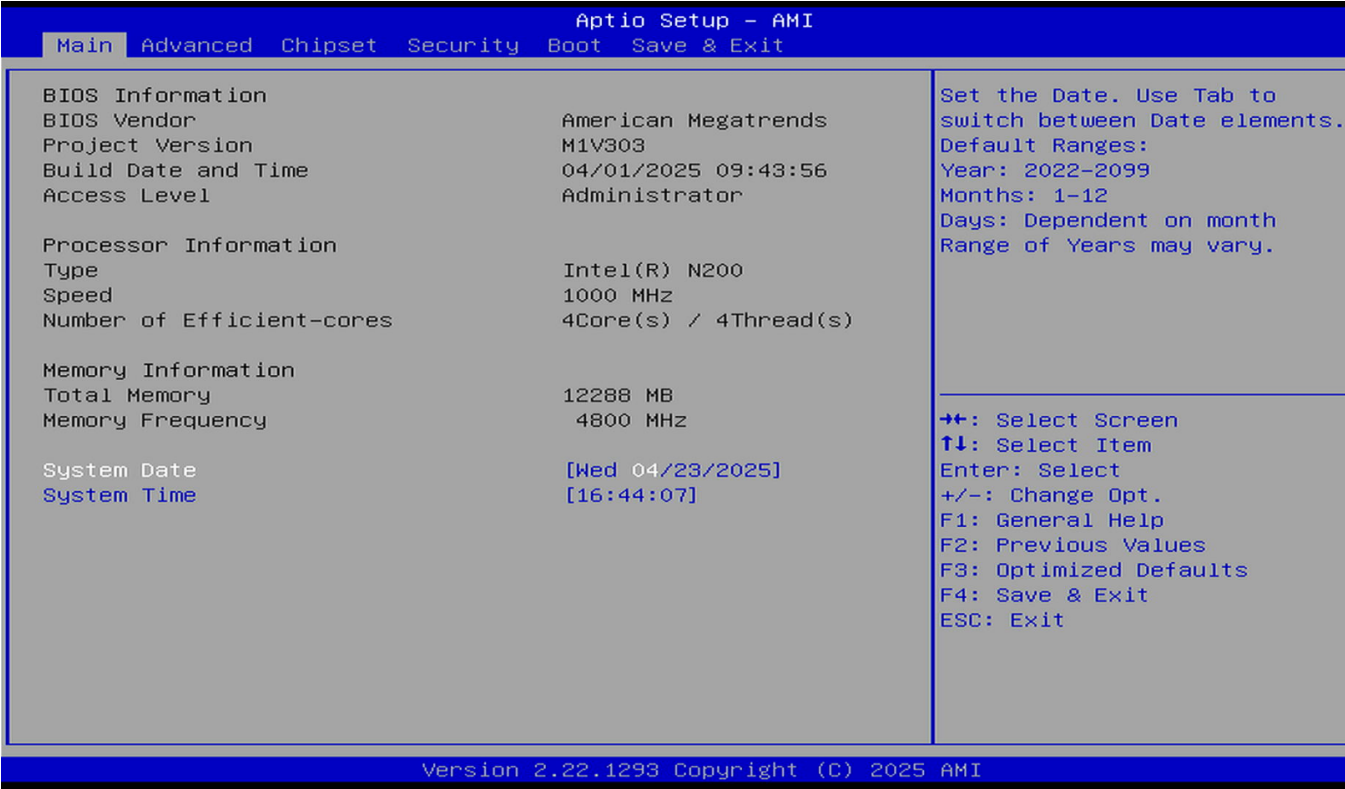

????????


1. ?????

- ??BIOS?????????? Boot ???

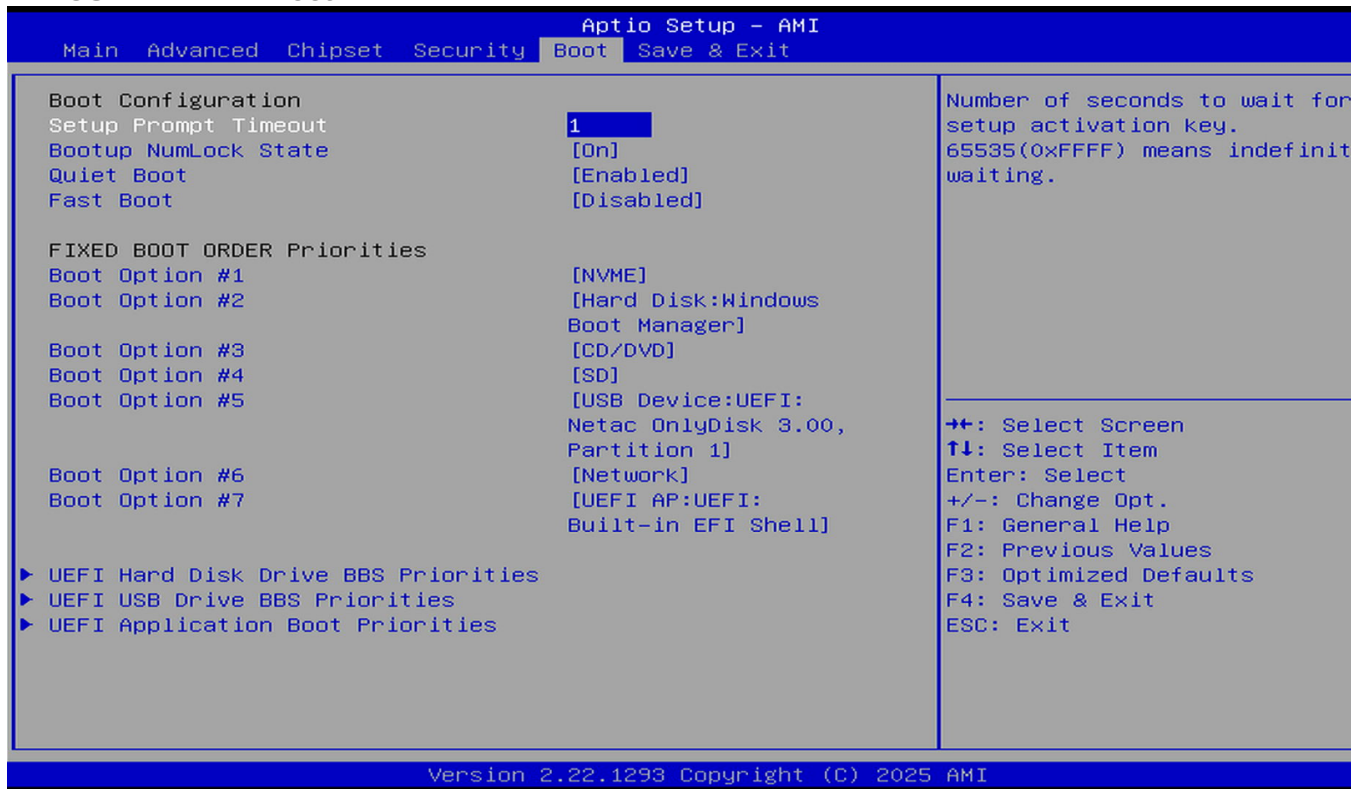

2. ??U???????

- ????????Boot Option #1???????

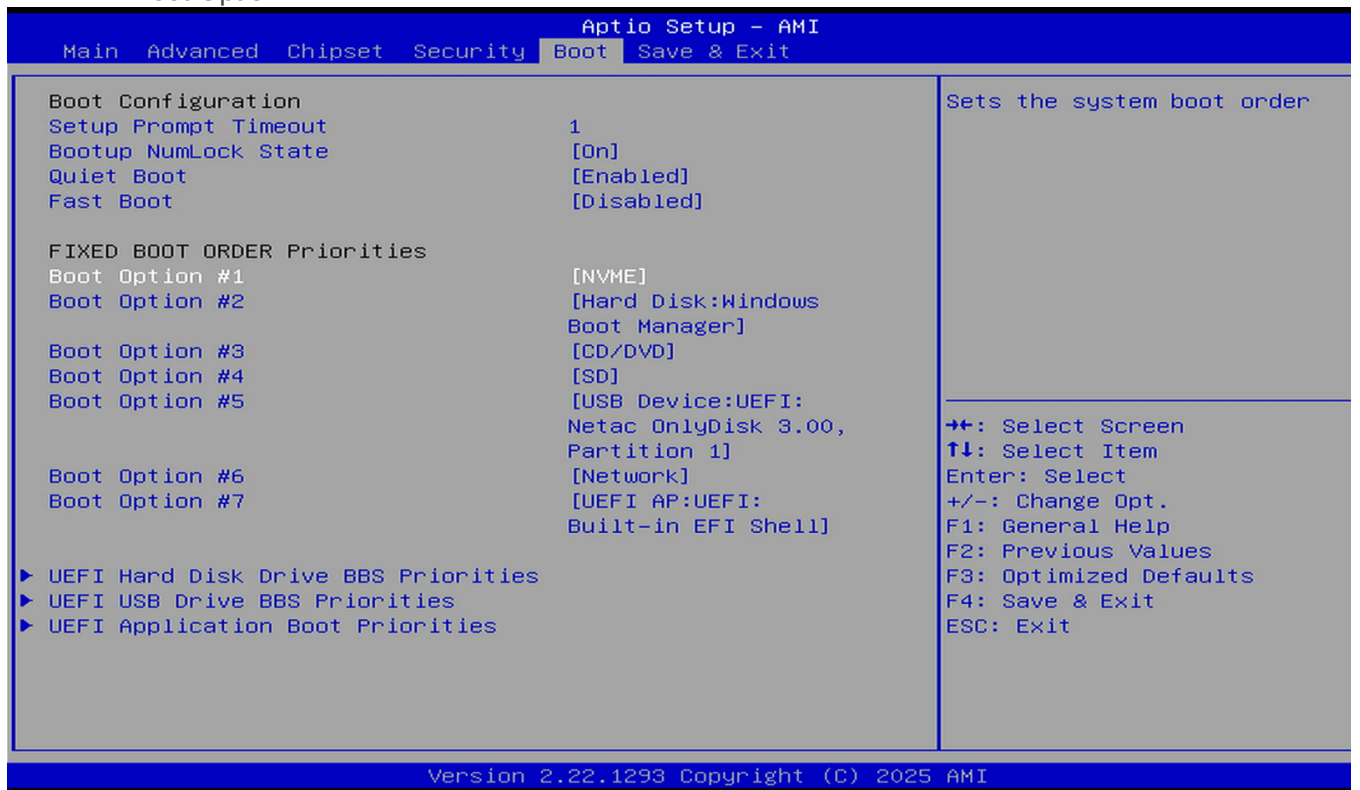

-
- The screenshot shows the Aptio Setup - AMI BIOS interface. The top bar contains the title 'Aptio Setup - AMI' and navigation tabs: 'Main', 'Advanced', 'Chipset', 'Security', 'Boot', and 'Save & Exit'. The 'Boot' tab is selected.
- The main area is divided into two columns. The left column contains the following settings:
- Boot Configuration
 - Setup Prompt Timeout: 1
 - Bootup NumLock State: [On]
 - Quiet Boot: [Enabled]
 - Fast Boot: [Disabled]
 - FIXED BOOT ORDER Priorities
 - Boot Option #1
 - Boot Option #2
 - Boot Option #3
 - Boot Option #4
 - Boot Option #5
 - Boot Option #6
 - Boot Option #7
- The right column contains the following text:
- Sets the system boot order
 - Screen
 - Item
 - ct
 - Opt.
 - Help
 - F2: Previous Values
 - F3: Optimized Defaults
 - F4: Save & Exit
 - ESC: Exit
- A blue box highlights the boot options, showing the following list:
- NVME
 - Hard Disk:Windows Boot Manager
 - CD/DVD
 - SD
 - USB Device:UEFI: Netac OnlyDisk 3.00, Partition 1
 - Network
 - UEFI AP:UEFI: Built-in EFI Shell
 - Disabled
- A black box highlights the boot priorities, showing the following list:
- UEFI Hard Disk Drive BBS Priorities
 - UEFI USB Drive BBS Priorities
 - UEFI Application Boot Priorities
- At the bottom of the screen, the version information is displayed: 'Version 2.22.1293 Copyright (C) 2025 AMI'.

-
- The screenshot shows the AMI Aptio Setup Utility interface. At the top, the title bar reads 'Aptio Setup - AMI'. Below it, a navigation bar contains the following tabs: 'Main', 'Advanced', 'Chipset', 'Security', 'Boot' (which is highlighted), and 'Save & Exit'.
- The main content area is divided into two columns. The left column displays the 'Boot Configuration' menu with the following items:
- Boot Configuration
 - Setup Prompt Timeout: 1
 - Bootup NumLock State: [On]
 - Quiet Boot: [Enabled]
 - Fast Boot: [Disabled]
 - FIXED BOOT ORDER Priorities
 - Boot Option #1: [USB Device:UEFI: Netac OnlyDisk 3.00,
 - Boot Option #2
 - Boot Option #3
 - Boot Option #4
 - Boot Option #5
 - Boot Option #6
 - Boot Option #7
 - UEFI Hard Disk Drive BBS Priorities
 - UEFI USB Drive BBS Priorities
 - UEFI Application Boot Priorities
- The right column contains a list of function key shortcuts:
- +: Select Screen
 - ↓: Select Item
 - Enter: Select
 - /=: Change Opt.
 - F1: General Help
 - F2: Previous Values
 - F3: Optimized Defaults
 - F4: Save & Exit
 - ESC: Exit
- A modal dialog box is centered on the screen, titled 'Save & Exit Setup'. It contains the text 'Save configuration and exit?' and two buttons: 'Yes' and 'No'.
- At the bottom of the screen, a status bar displays 'Version 2.22.1293 Copyright (C) 2025 AMI'.

“ ??????????BIOS???????????????Del?F7???????????????????????